


NT3000-1JA

WT3000-1JA Micro Gear Pump Drive

Operating Manual

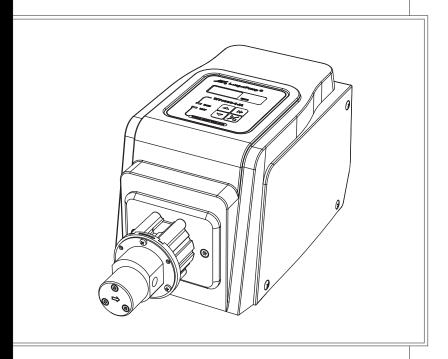

Baoding Longer Precision Pump Co., Ltd.



Baoding Longer Precision Pump Co., Ltd.

Building A, Chuangye Center Baoding, National High-Tech Industrial Development Zone

Baoding, Hebei, China 071051

TEL: 86-312-3110087 3138553

FAX: 86-312-3168553

E-mail: longer@longerpump.com Http://www.longerpump.com



Micro Gear Pump Drive Operating Manual



\triangle Important Information:

Please read operating manual carefully before operation.



↑ Warning:

- To prevent damage to pump, do not run the pump dry.
- If the power line or the plug are worn or damaged please pull out the plug (Hold the plug not the power line when pulling out).
- Please shut down the power supply and pull out the plug when you think the pump needs to be maintained or repaired.
- Shut down the power supply of the pump when connecting to external control equipment.
- The International Protection rating of this pump is IP31. Do not let liquid enter this pump drive.

Warranty:


- The warranty period of this product is one year. If repair or adjustment is necessary within the warranty period, the problem will be corrected at no charge if it is not due to misuse or abuse on your part, as determined by the manufacturer. Repair costs out side the warranty period, or those resulting from product misuse or abuse, may be invoiced to you.
- Contact Longer Company or Longer's dealers before returning pump to repair.
- Adopt original carton or reliable package when returning pump to repair.
- Write a note on detailed description of failure phenomena and contact information and put this note along with pump before returning pump to repair.


Table of Contents

| Introduction · · · · · · · · · · · · · · · · · · · |
|--|
| Operation Panel · · · · · · · · · · · · · · · · · · · |
| Basic Operation · · · · · · · · · · · 2 |
| Changing the Pump Head |
| Acceptable Pump Head · · · · · · · · · · · 2 |
| External Control Function · · · · · · · 2 |
| Communication Control · · · · · · · · · · · · · · · · · 3 |
| Analog Signal Control · · · · · · · · · · · · · · · · · 3 |
| Footswitch · · · · · · · · · · · · · · · · · 4 |
| Maintenance······ 4 |
| Technical Specifications · · · · · · · · · · · · · · · · 4 |

Instruction

WT3000-1JA micro gear pump accepts MG204, MG209, MG213 pump heads. It has features of wide flow rates range, low pulse and big pressure. The pump delivers flow rates from 85.7 to 2571.4 ml/min. It adopts DC brushless motor which has characters of high efficiency and free maintenance.

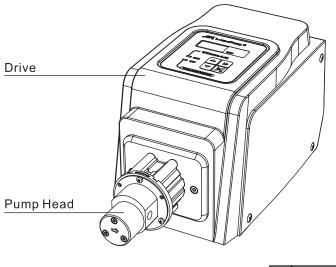

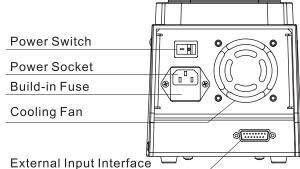


Reference:

For detail information about external control function please see page 10.



Operation Panel

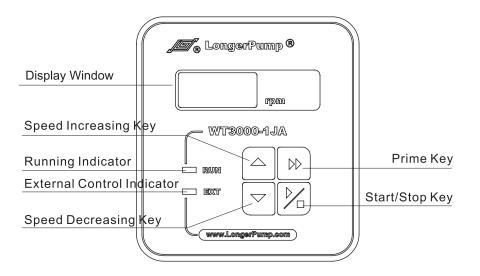

Basic Operation

Start/Stop Key

Press the Start/Stop Key to switch the start and stop of the pump.

Speed Increasing Key

Press Speed Increasing Key one time, the speed of the pump increases one turn. Press Speed Increasing Key continuously, the speed of the pump increases rapidly up to 3000 rpm.

Speed Decreasing Key

Press Speed Decreasing Key one time, the speed of the pump decreases one turn. Press Speed Decreasing Key continuously, the speed of the pump decreases rapidly until 300 rpm.

Prime Key

Press Prime Key the pump runs at the speed of 3000 rpm and the LED displays "---"for fast empting, filling and rinsing. Press Prime Key again the pump returns to previous state.



Micro Gear Pump Drive Operating Manual

Changing the Pump Head

The pump head has been installed on drive before leaving the factory. Please follow below procedure when changing a new pump head is needed.

- 1.Loose the 3 pieces M3 tightening screws which connecting the pump head and the pump head support. Take down the pump head.
- 2. Tighten the 3 pieces M3 screws to connect the new pump head and the pump head support.
- 3. For detailed method please refer to pump head operating manual.




Acceptable Pump Head

Different pump heads have different flow rates range. Please see below:

❖ Pump Head and Flow Rates Table (Pressure: Normal)


| Acceptable Pump Heads | Part Number | Flow Rates (mL/min) 300-3000(rpm) |
|--------------------------|-------------|--------------------------------------|
| MG204 | 05015010001 | 85. 7-857.1 |
| MG209 | 05015010002 | 171.4-1714.3 |
| MG213 | 05015010003 | 257.1-2571.4 |

External Control Function:

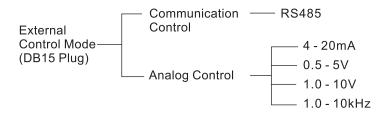

Communication Control Mode

The pump can connect to control computer (computer, PLC, SCM) through RS485 serial communication module (see figure 1). Please contact Longer Company for communication protocol.

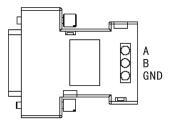


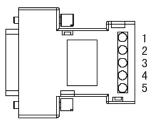


Figure 1: Communication Module

Figure 2: External Control Module

Analog signal control mode


Please see figure 2 for external control module.

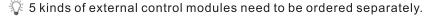

Terminals Definition of External Control Module

- 1#: Analog speed control input, for external speed control in external control modules of 4 to 20 mA, 0.5 to 5V and 1 to 10 V.
- 2#: External start/stop control input. When connected to COM, the pump runs, when connected to high level, the pump stops.
- 3#: Open
- 4#: Reference potential for 4 to 20 mA, 0.5 to 5V, 1 to 10V speed control input. Pulse speed control input, for external speed control in external control module of 0 to 10 KHz.
- 5#: Reference potential for external start/stop and pulse speed control input.



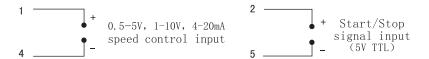

0 - 5V, 0 - 10V, 4 - 20mA External Control Module Wiring Diagram



Pulse Input External Control Module Wiring Diagram

❖ Footswitch

Control the start/stop of the pump through the external control interface.

* Maintenance

Keep the surface of drive and pump head clean and dry to prolong the service life of the drive and the pump head.

To prevent damage to pump, do not run the pump dry.

Technical Parameters

* Main Function

| Acceptable Pump Head | MG204, MG209, MG213 |
|-----------------------------------|---|
| Operating Mode | Membrane Keypad |
| Speed Adjustment | Speed can be adjusted from 300 rpm to 3000 rpm |
| Prime Function | For fast rinsing, filling and emptying |
| Display Function | 4 digits LED displays the speed and 2 indicators display the running state and external control state |
| | |
| External Control Input | Control the speed and start/stop of the pump |
| External Control Input Footswitch | Control the speed and start/stop of the pump Control the start/stop of the pump |
| Footswitch | |
| Footswitch | Control the start/stop of the pump |
| Footswitch Communication Function | Control the start/stop of the pump Realize the computer control |

5



* Footswitch

| Flow Rates | 85.7-2571.4 (mL/min) | |
|-----------------------------|--|--|
| Speed | 300-3000 (rpm) | |
| Speed Accuracy | 1.0% | |
| Speed Resolution | 1 rpm | |
| Display | Four digital LED display running status | |
| | Speed control (4-20mA, 0.5-5V, 1.0-10V, 1.0- | |
| External Input Control | 10kHz corresponding to 300 to 3000 rpm, | |
| | start/stop control (5V TTL) | |
| Communication | RS485 | |
| Acceptable Liquid | Liquid containing particles smaller than 10µm. | |
| Acceptable Liquid | PTFE -45-50℃; PEEK -45-120℃ | |
| Temperature | | |
| Max. Outlet Pressure | MG204: 0.8MPa | |
| | MG209: 0.8MPa | |
| (Pumping Medium: Water) | MG213: 0.3MPa | |
| Acceptable Liquid Viscosity | ≤200cst | |
| Power Supply | AC176-264V/90-130V, 50Hz/60Hz | |
| Power Consumption | ≤150W | |
| Operation Conditions | Temperature 0 to 40° C, | |
| Operation Conditions | Relative Humidity <90% (No dew) | |
| Drive Dimensions (L×W×H) | 232×142×149 (mm) | |
| Drive Weight | 2.83kg | |
| IP Rating | IP31 | |
| | | |

6